

Ŕ

## FMS MEASUREMENT INSERTS MADE TO ORDER

These are examples of measurement inserts made for special and/or specific tasks.

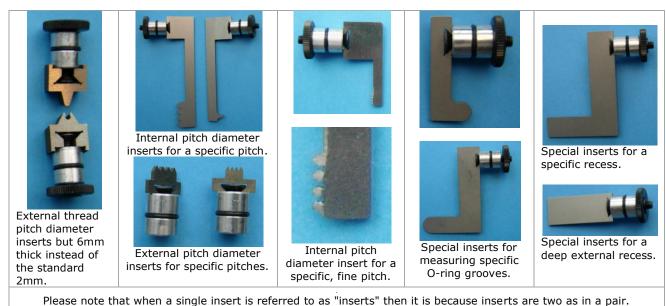


The following are a few examples of the measurement tasks FMS inserts can measure. Email us a copy of the drawing or a sketch and we will give you a price and delivery time.

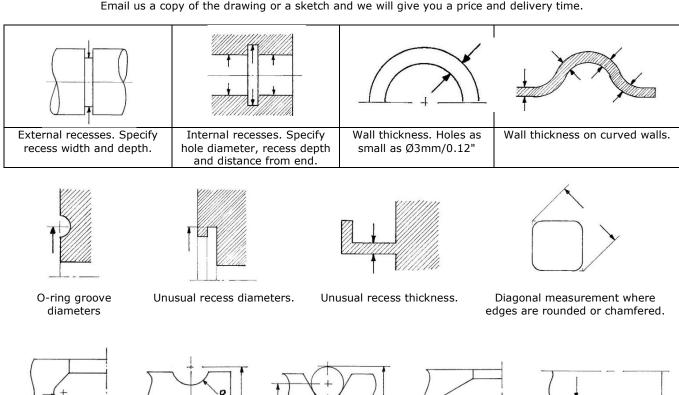



Do any of these look familiar?

## **FMS MEASUREMENT INSERTS MADE TO ORDER**


## Spline Go/No-Go Gauges





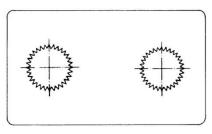



Go/no-Go for external spline




Go or No-Go for larger external spline


## Recess Go/No-Go Gauges








Go/No-Go for external recess width. Specify depth and width (A and B)

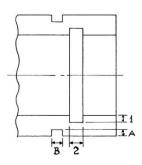

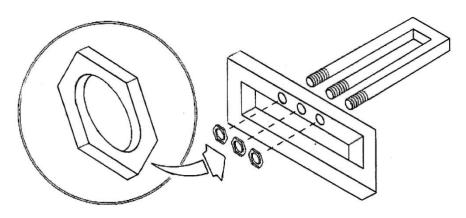

Never forget that just because it can be drawn doesn't mean it can be made or measured.